


VAN RAMP INSTALLATION INSTRUCTIONS

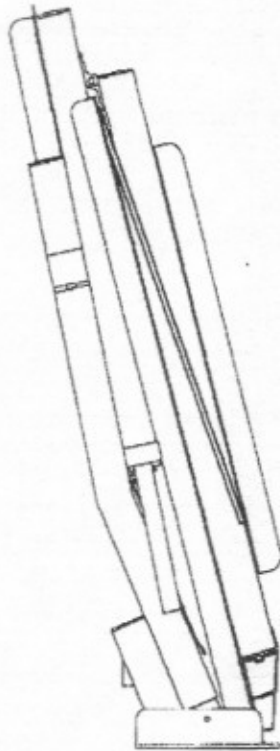

VAN RAMP IN UPRIGHT POSITION

Set folded ramp in van doorway making sure ramp has clearance on both sides and is set in van far enough to clear doors. Door should clear ramp by about 1/4" when closed.

Mark four mounting holes on van floor (make sure that no wires, brake lines, fuel lines, tanks etc. will be disturbed). Drill four 7/16" holes through van floor.

Set ramp back in van using holes as template. Mark holes on underside of mounting plate. Drill four 7/16" holes in mounting plate.

Bolt ramp in place using four 5/16" x 2" bolts and self-locking nuts. Make sure to use flat washers on underside of van floor.